


DF 400 / 800 STEP-BY-STEP GRAPHIC INSTALLATION

(FOR 800 DO INSTRUCTIONS TWICE)



1. REMOVE LOCKING PIN FROM UNDER UNIT.

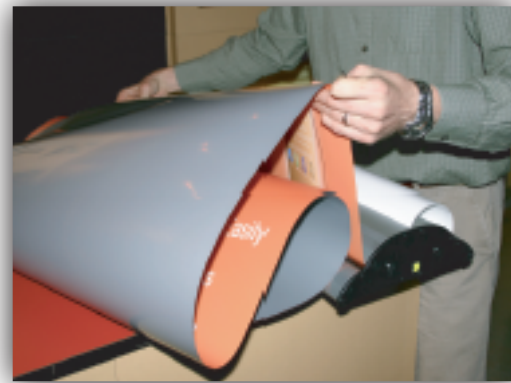

2. PULL OLD GRAPHIC UNTIL PVC TONGUE IS EXPOSED.



3. PLACE LOCKING PIN IN LOCK ON THE SIDE OF UNIT.




4. REMOVE OLD GRAPHIC.



5. REMOVE CAP FROM TOP BAR, AND SLIDE OFF TOP BAR.




6. REMOVE PVC STRIP, LEAVE LOOP TAPE ATTACHED.

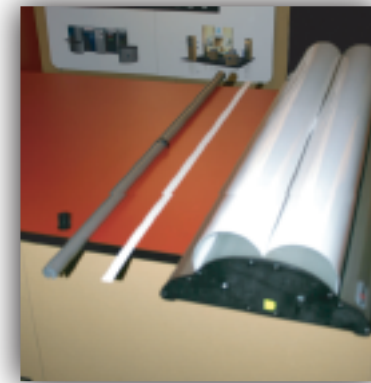

7. THIS IS HOW UNIT SHOULD LOOK.



8. PLACE PVC STRIP ON THE TOP OF THE NEW GRAPHIC.

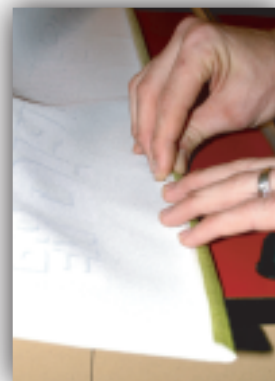

9. FOLD GRAPHIC OVER ONCE.



10. PLACE GRAPHIC IN THE TOP BAR.



11. GENTLY SLIDE TOP BAR OVER THE GRAPHIC.



12. TOP BAR IS ATTACHED. * STEPS 8-12 MUST BE DONE BEFORE ATTACHING THE BOTTOM, THIS ELIMINATES THE POSSIBILITY OF GRAPHIC BEING SUCKED INTO BASE OF THE UNIT.



13. CAP ENDS OF THE TOP BAR.



14. PLACE BOTTOM OF GRAPHIC IN FRONT OF THE UNIT.



15. ATTACH GRAPHIC TO PVC TONGUE.



16. SECURE THE WHOLE LENGTH OF GRAPHIC.



17. FIRMLY HOLD GRAPHIC WHILE RELEASING THE LOCK PIN.



18. SLOWLY ALLOW THE GRAPHIC TO ROLL INTO THE UNIT.